

Schedule of Inspection and Maintenance Services

Maintaining Your Vehicle's Finish

The best way to preserve your vehicle's finish and aid in avoiding rust is to keep the vehicle clean by washing frequently. Wash the vehicle only with lukewarm or cold water. Do not wash the vehicle in the direct rays of the sun, or use strong soap or chemical cleaners. Any cleaning agents used should be washed off promptly and not allowed to dry on the finish.

Calcium chloride and other salts, ice melting agents, road oil and tar, tree sap, bugs, bird droppings, chemicals from industrial chimneys and other foreign matter may damage the finish if left on the painted surfaces. Prompt washing may not completely remove all these deposits. Additional cleaners may be needed. When using chemical cleaners developed for this purpose, be sure they are safe for use on painted surfaces.

Any stone chips, fractures or deep scratches in the finish should be repaired promptly. Bare metal will corrode quickly and can develop into major repair expense. Minor chips and scratches can be repaired with touch-up materials available from your Subaru Retailer.

If your vehicle is damaged and requires sheet metal repair or replacement, be sure the body shop uses Genuine Subaru Replacement Parts.

Maintenance

Vehicle maintenance is an important factor for proper vehicle operation. The vehicle's driver should ensure that fluid levels (engine oil, coolant, etc.) are checked frequently (i.e., each time you add fuel) in accordance with the instructions in the Owner's Manual.

We suggest that you schedule an appointment at any Authorized Subaru Retailer for any of the recommended services outlined on the following pages.

The frequency of scheduled inspection and maintenance services as set forth is minimal. However, it may be necessary that they be performed more frequently depending on road conditions, weather, atmospheric conditions, vehicle usage and individual driving habits. See Page 29 for maintenance suggestions under severe driving conditions.

Maintenance, repair or replacement of the emission control devices and systems of your vehicle may be performed by any automotive repair establishment or individual, using any automotive part which its manufacturer has certified will not result in a failure of your vehicle to comply with the regulations of the U.S. Environmental Protection Agency. Please see the Emission Control Systems Warranties for details.

Symbols used:

- R – Replace
- I – Inspect, correct or replace if necessary
- P – Perform

Continue periodic maintenance beyond 120,000 miles (192,000 km) or 120 months by returning to the second column of the maintenance schedule and adding 120,000 miles (192,000 km) or 120 months to the column headings.

2022 MY All Vehicles – Federal/California Specifications Vehicles

MAINTENANCE ITEM	MAINTENANCE INTERVAL (Number of months or km (mi), whichever occurs first)																				REMARKS			
	Months x 1,000 km x 1,000 mi	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114		120	126	132
		9.6	19.2	28.8	38.4	48.0	57.6	67.2	76.8	86.4	96.0	105.6	115.2	124.8	134.4	144.0	153.6	163.2	172.8	182.4		192.0	201.6	211.0
1 Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Note 1
2 Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Note 1
3 Spark plug										R														
4 Drive belt(s)					I					I												I		
5 Timing belt (WRX STi)																R								
6 Fuel systems, lines & connections						I					I					I						I		Note 6 & 7
7 Fuel filter												R												Note 2 & 7
8 Air cleaner element						R					R						R					R		Note 8
9 Cooling system, hoses & connections							I				I						I					I		Note 10
10 Engine coolant (engine side), (inverter assembly side - Hybrid)	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter.																						Note 10	
11 Clutch operation			I		I		I		I		I		I		I		I		I		I		I	
12 Transmission gear oil (except BR2)						I					I					I						I		Note 3
13 CVT fluid (except BR2 & Hybrid)												I											I	
ATF (BR2 & Hybrid)							I					R						I					R	Note 4
14 Front & rear differential gear oil (except BR2)						I					I											I		
Rear differential gear oil (BR2)		I		I		I		I		I		I		I		I		I		I		I		Note 3
Replace every 4 years or 96,000 km (60,000 miles).																								
15 Brake lines, operation of parking & service brake systems			I		I		I		I		I		I		I		I		I		I		I	Note 6
16 Brake fluid / clutch fluid (MT only)						R					R						R					R		Note 5
17 Disc brake pad & disc, front & rear axle boots & joints			I		I		I		I		I		I		I		I		I		I		I	Note 6
18 Steering & suspension			I		I		I		I		I		I		I		I		I		I		I	Note 6
19 Wheel bearing												I										I		
20 Rotate & inspect tires	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	Note 9
21 HVAC system A/C filter			R		R		R		R		R		R		R		R		R		R		R	Note 8

R=Replace. I=Inspect, correct or replace if necessary. P=Perform.